


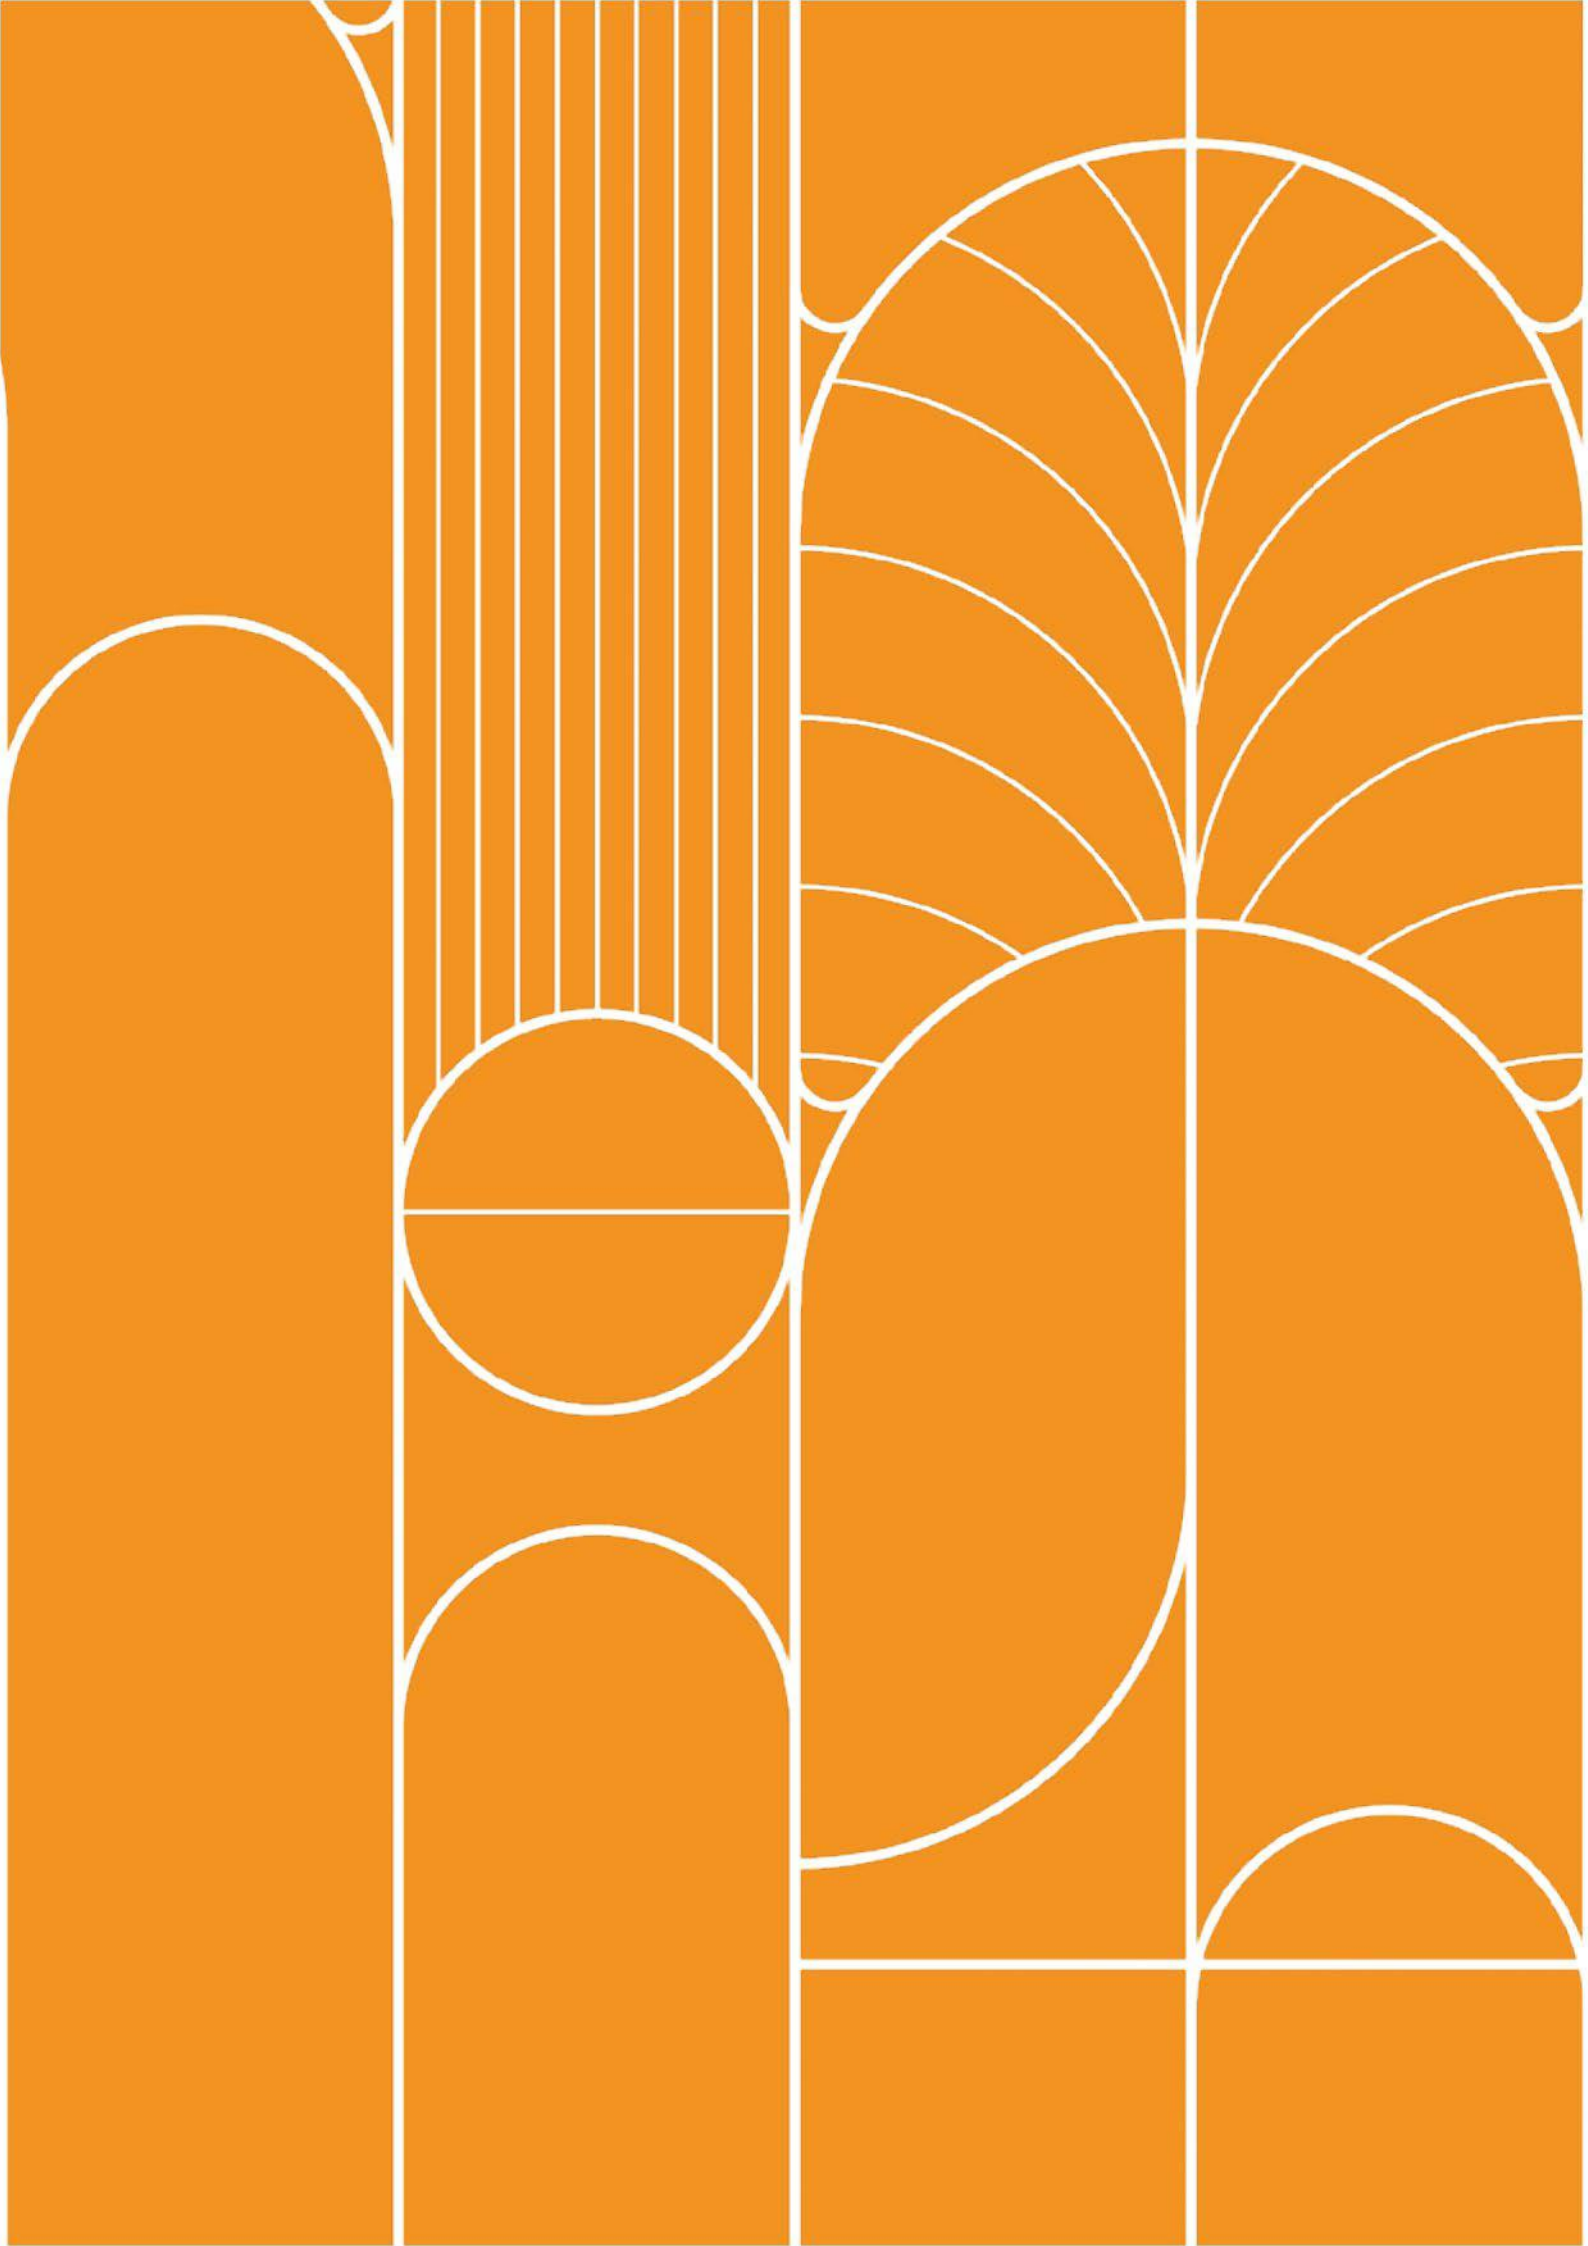

دکوراسیون داخلی برنا
کاتالوگ قرنیز و دیوارپوش

آدرس: بلوار امیرکبیر، روبه رو باغ جنت، مجتمع تجاری
ایرانیان، طبقه منفی یک، واحد b26

شماره های تماس |
۰۹۱۷۳۰۲۷۵۴۷-۰۷۱۳۸۴۴۱۵۷۰
۰۹۰۲۳۰۲۷۵۴۷-۰۹۰۲۴۴۸۳۹۰۲








T1 Classic Style



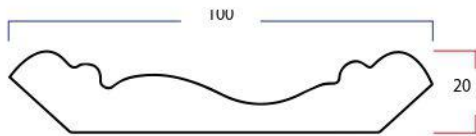

FA2-07(100mm-20T)



FA2-30



FA2-25



FA2-48



FA2-102



FA2-07




FA2-933



FA2-101



FA2-12



FA1-07(80mm-15T)



FA1-30



FA1-25



FA1-48



FA1-102



FA1-07




FA1-933



FA1-101



FA1-12

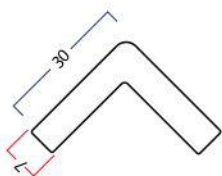

FC2-07(30mm-7T)



FC2-30



FC2-25



FC2-48



FC2-102



FC2-07




FC2-933



FC2-101



FC2-12

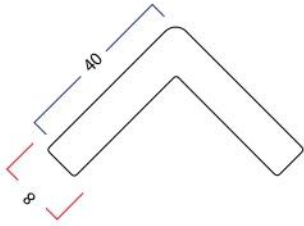

FC3-07(40mm-8T)



FC3-30



FC3-25



FC3-48



FC3-102



FC3-07




FC3-933



FC3-101



FC3-12



FJ2-07(28mm-10T)



FJ2-30



FJ2-25



FJ2-48



FJ2-102



FJ2-07




FJ2-933



FJ2-101



FJ2-12



FE3-07(70mm-13T)



FE3-30



FE3-25



FE3-48



FE3-102



FE3-07




FE3-933



FE3-101



FE3-12



F15-07(16mm-10T)



F15-30



F15-25



F15-48



F15-102



F15-07




F15-933



F15-101



F15-12



F16-07(32mm-13T)



F16-30



F16-25



F16-48



F16-102



F16-07




F16-933



F16-101



F16-12



F17-07(30mm-15T)



F17-30



F17-25



F17-48



F17-102



F17-07




F17-933



F17-101



F17-12



F18-07(16mm-8T)



F18-30



F18-25



F18-48



F18-102



F18-07




F18-933



F18-101



F18-12

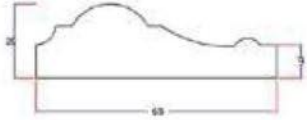

FB5-07(65mm-20T)



FB5-30



FB5-25



FB5-48



FB5-102



FB5-07




FB5-933



FB5-101



FB5-12

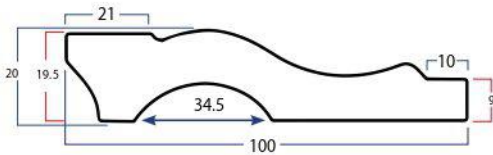

FG8-07(100mm-20T)



FG8-30



FG8-25



FG8-48



FG8-102



FG8-07




FG8-933



FG8-101



FG8-12

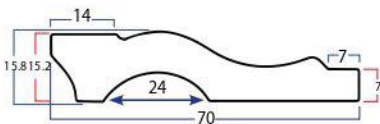

FG7-07(70mm-16T)



FG7-30



FG7-25



FG7-48



FG7-102



FG7-07



FG7-933




FG7-101



FG7-12



FG10-07(200mm-24T)



FG10-30



FG10-25



FG10-48



FG10-102



FG10-07




FG10-933



FG10-101



FG10-12

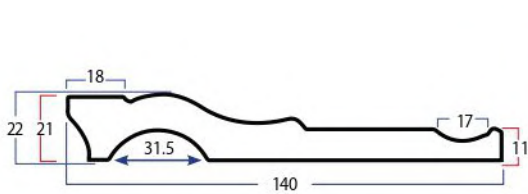

FG9-07(140mm-22T)



FG9-30



FG9-25



FG9-48



FG9-102



FG9-07



FG9-933



FG9-101



FG9-12









T2 Antique Style



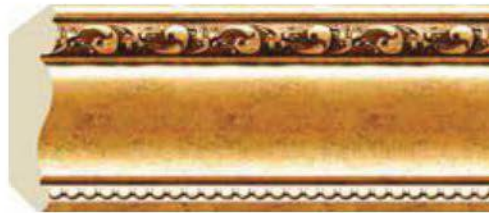

154-552(110mm-22T)



154-1084



154-552



154-306




154-551



154-933



154-418



146-552(90mm-18T)



146-1084



146-552



146-306



146-551



146-933



146-418



Borna



116-552(30mm-8T)



116-1084



130-552



116-306




116-551



116-933



116-418

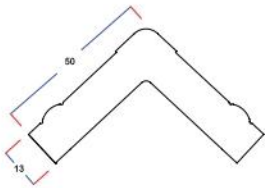

142-552(50mm-13T)



142-1084



142-552



142-306




142-551



142-933



142-418



115-552(30mm-8T)



115-1084



115-552



115-306



115-551




115-933



115-418

The Beautiful Housing



130-552(15mm-8T)



130-1084



130-552



130-306




130-551



130-933



130-418



158-552(18mm-10T)



158-1084



158-552



158-306




158-551



158-933



158-418



157-552(30mm-13T)



157-1084



157-552



157-306




157-551



157-933



157-418

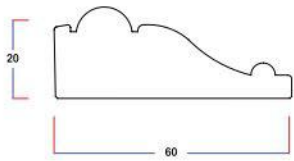

161-552(60mm-20T)



161-1084



161-552



161-306




161-551



161-933



161-418

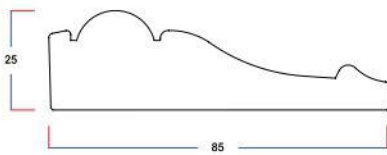

152-552(85mm-25T)



152-1084



152-552



152-306




152-551



152-933



152-418



143-552(80mm-14T)



143-1084



143-552



143-306




143-551



143-933



143-418



153-552(95mm-15T)



153-1084



153-552



153-306



153-551



153-933




153-418





T3 Wood Style





172-6(100mm-19T)



172-3



172-4




172-5



172-6



172-7



173-6(80mm-15T)



173-3



173-4




173-5



173-6



173-7

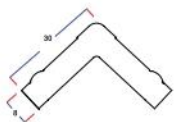

116-6(30mm-8T)



116-3



116-4




116-5



116-6



116-7

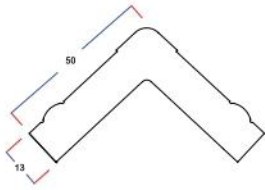

142-6(50mm-13T)



142-3



142-4




142-5



142-6



142-7



115-6(30mm-10T)



115-3



115-4




115-5



115-6



115-7



130-6(15mm-8T)



130-3



130-4




130-5



130-6



130-7

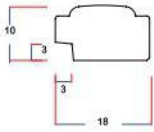

158-6(18mm-10T)



158-3



158-4




158-5



158-6



158-7



157-6(30mm-13T)



157-3



157-4




157-5



158-6



157-7

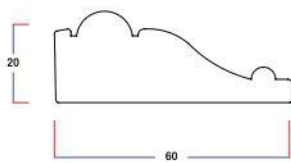

161-6(60mm-20T)



161-3



161-4




161-5



161-6



161-7

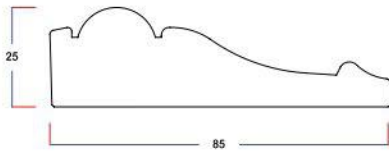

152-6(85mm-25T)



152-3



152-4




152-5



152-6



152-7



143-6(80mm-15T)



143-3



143-4




143-5



143-6



143-7



153-6(95mm-15T)



153-3



153-4




153-5



153-6



153-7

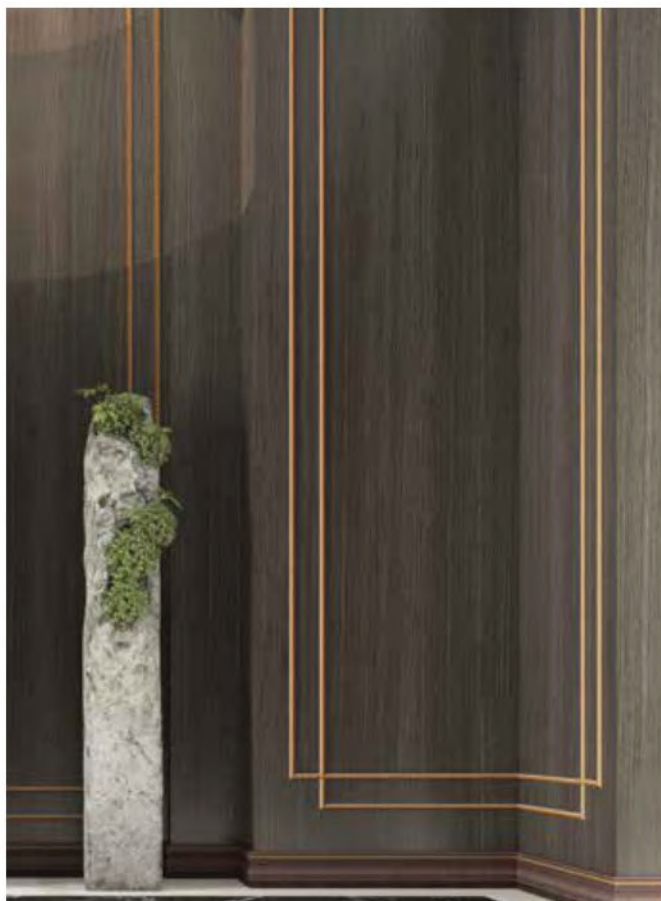






T4 Stone Style




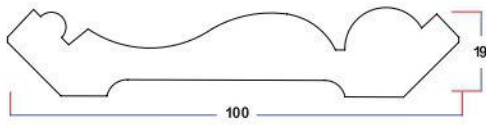

122-42(100mm-19T)



122-39

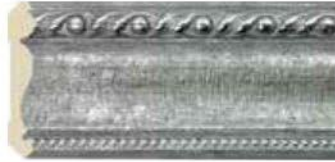


122-40



122-41



122-42



123-42(80mm-15T)



123-39




123-40



123-41



123-42

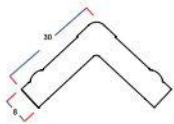

116-42(30mm-8T)



116-39




116-40



116-41



116-42

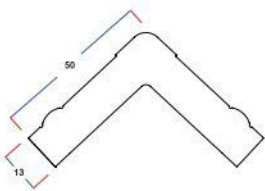

142-42(50mm-13T)



142-39



142-40




142-41



142-42



Borna



115-42(30mm-10T)



115-39




115-40



115-41



115-42



130-42(15mm-8T)



130-39




130-40



130-41



130-42

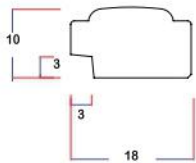

158-42(18mm-10T)



158-39




158-40



158-41



158-42



157-42(30mm-13T)



157-39




157-40



157-41



157-42



120-42(15mm-10T)



120-39




120-40



120-41



120-42



125-42(30mm-14T)



125-39




125-40



125-41



125-42

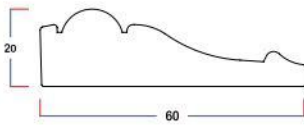

161-42(60mm-20T)



161-39





161-40



161-41



161-42

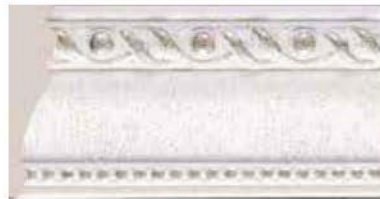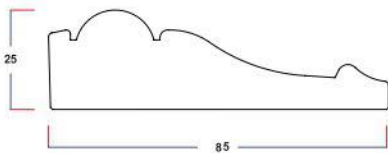

152-42(85mm-25T)



152-39




152-40



152-41




152-42



143-42(80mm-14T)



143-39

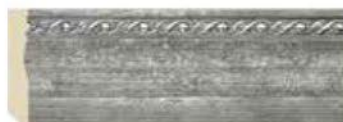


143-40



143-41



143-42



153-42(95mm-15T)



153-39



153-40



153-41





153-42





Pannels

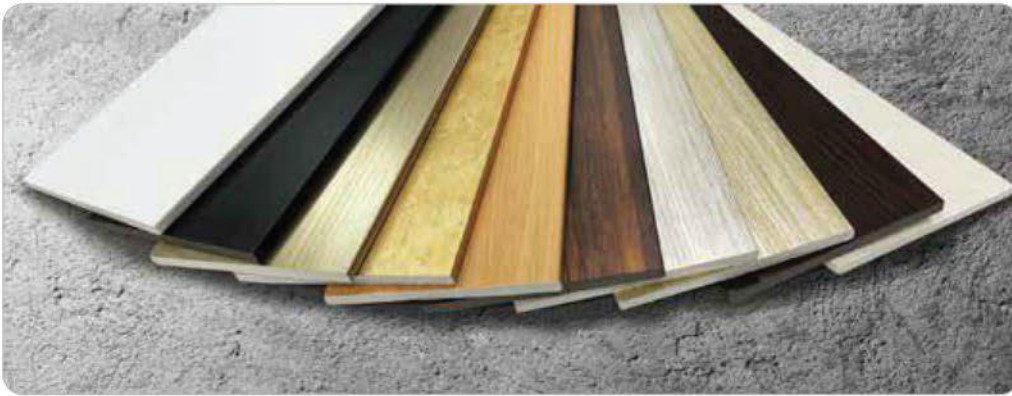

N10-12F



N10-12F



N10-30F



N10-51F



N10-102F



N10-111F



N10-112F



N10-117F



N10-210F



N10-363F



N10-552F










Modern Set




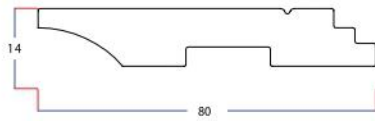

N11-12(80mm-14T)

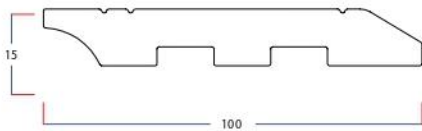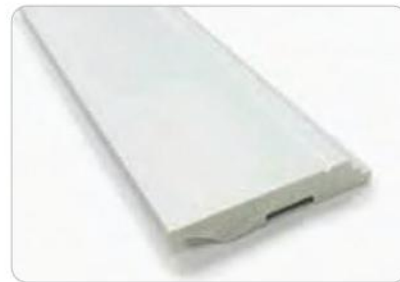


N12-12(100mm-15T)



N13-12(120mm-17T)





N21-12(35mm-13T)




N22-12(90mm-15T)




N31-12(20mm-10T)




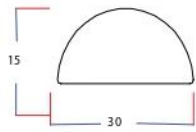

N32-12(30mm-15T)



N33-12(30mm-10T)

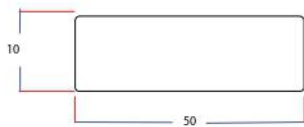

N34-12(50mm-10T)









Наталья Семёнова

Дорога к Храму



















Borna

قرنيز و ديوارپوش


Woodlock-AGE-Hardwood

woodlock




















woodlock

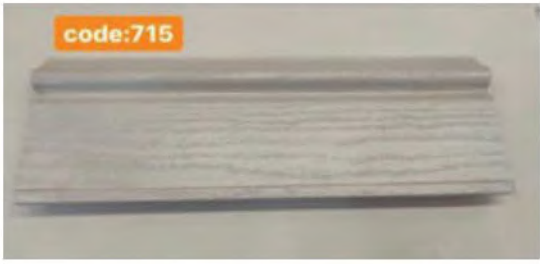

age

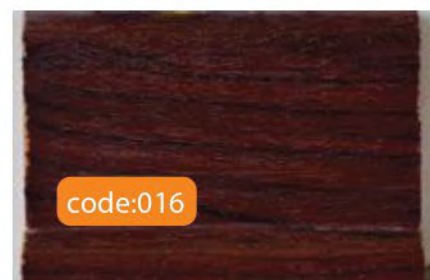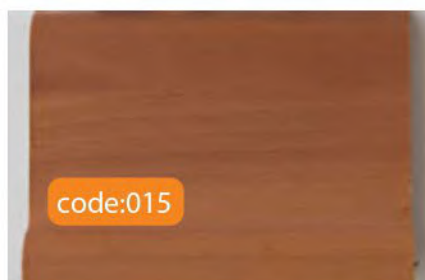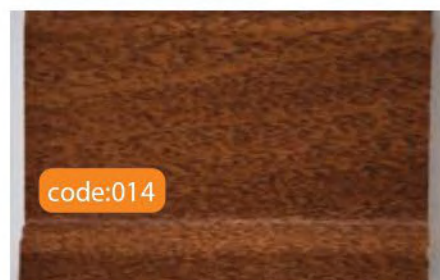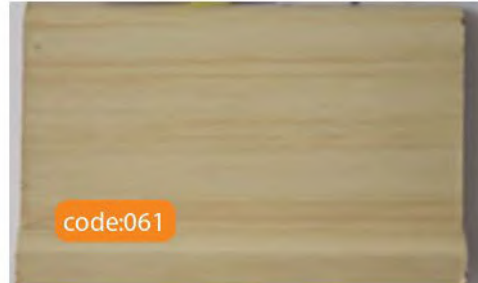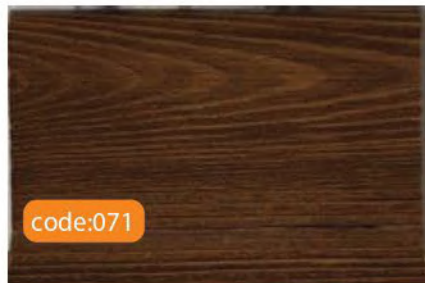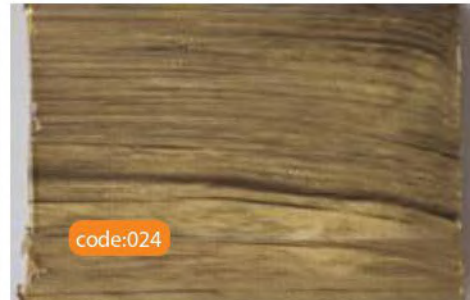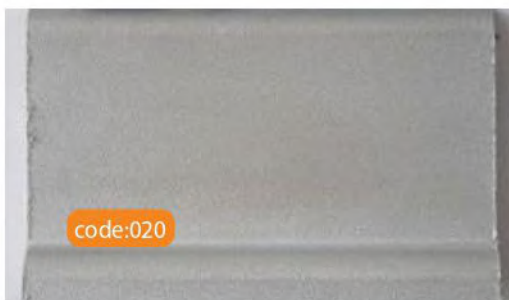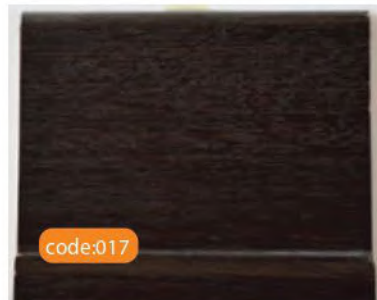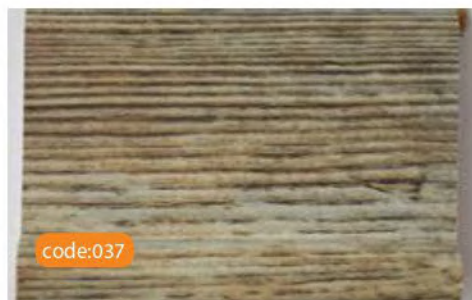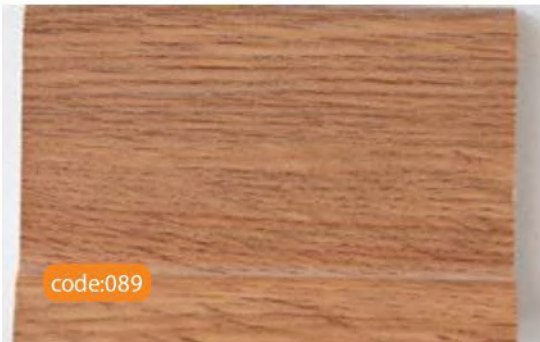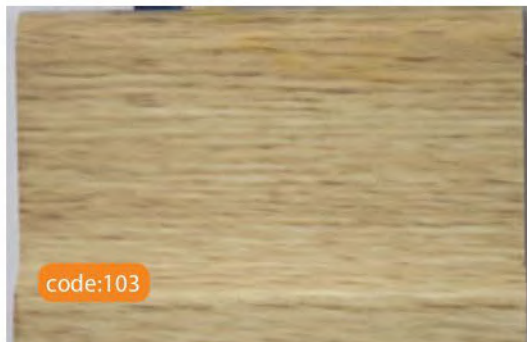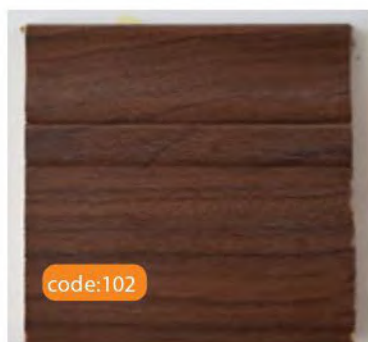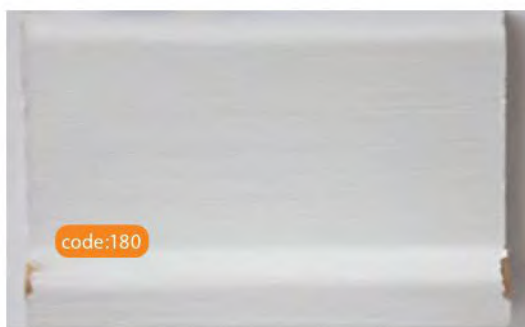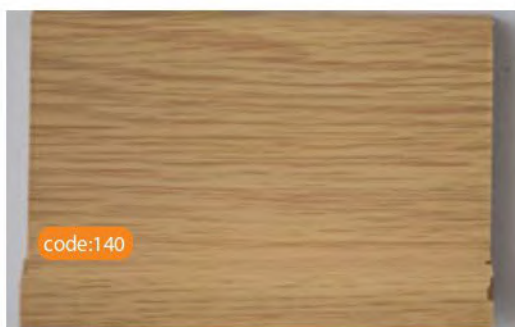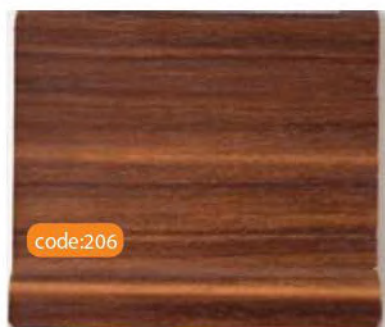

age



code:012



code:013



code:05



code:06



code:07



HARDWOOD



code:601



code:602



code:603



code:604



code:605



code:606




code:607
















code:608




code:609

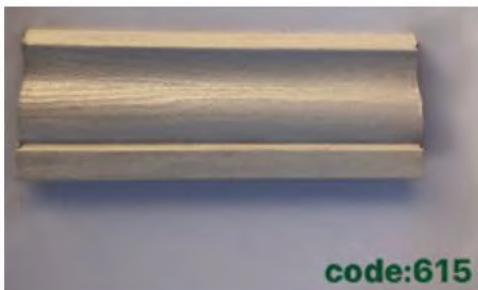

code:615

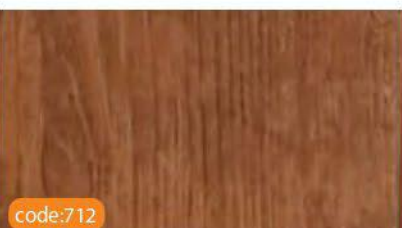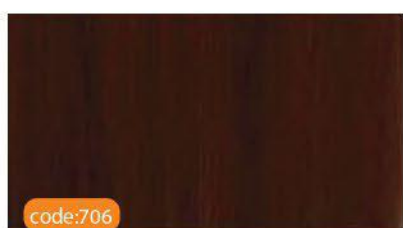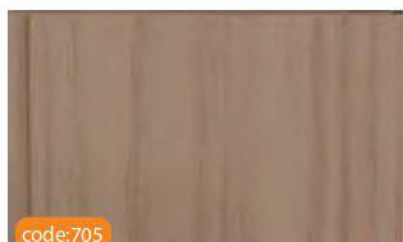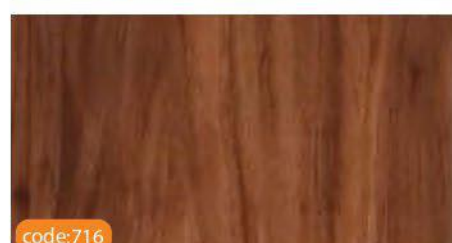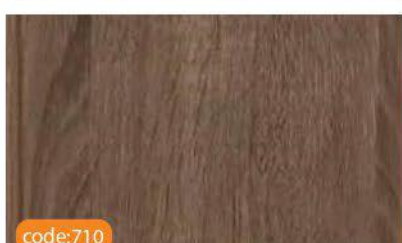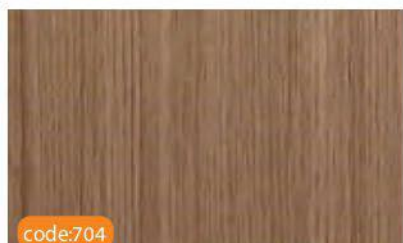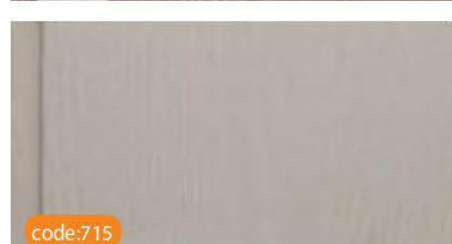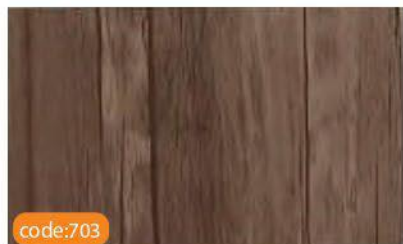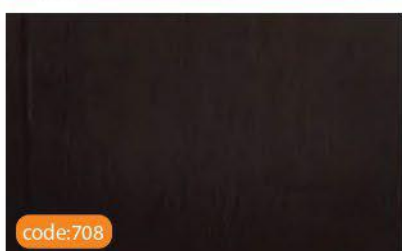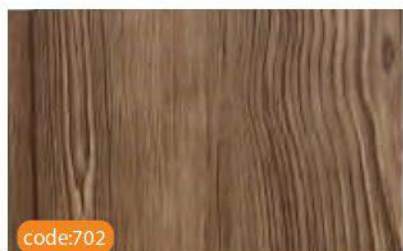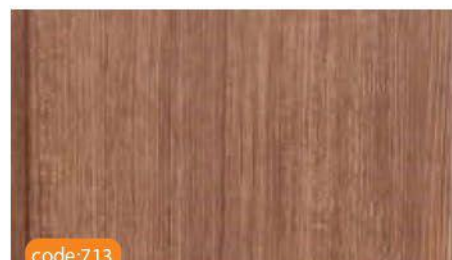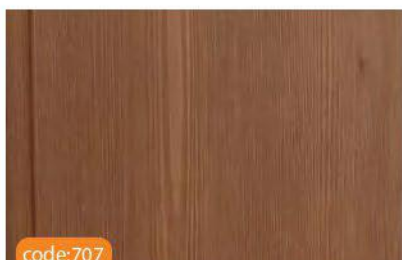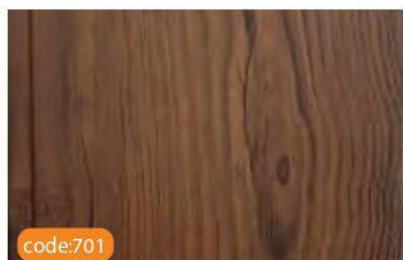



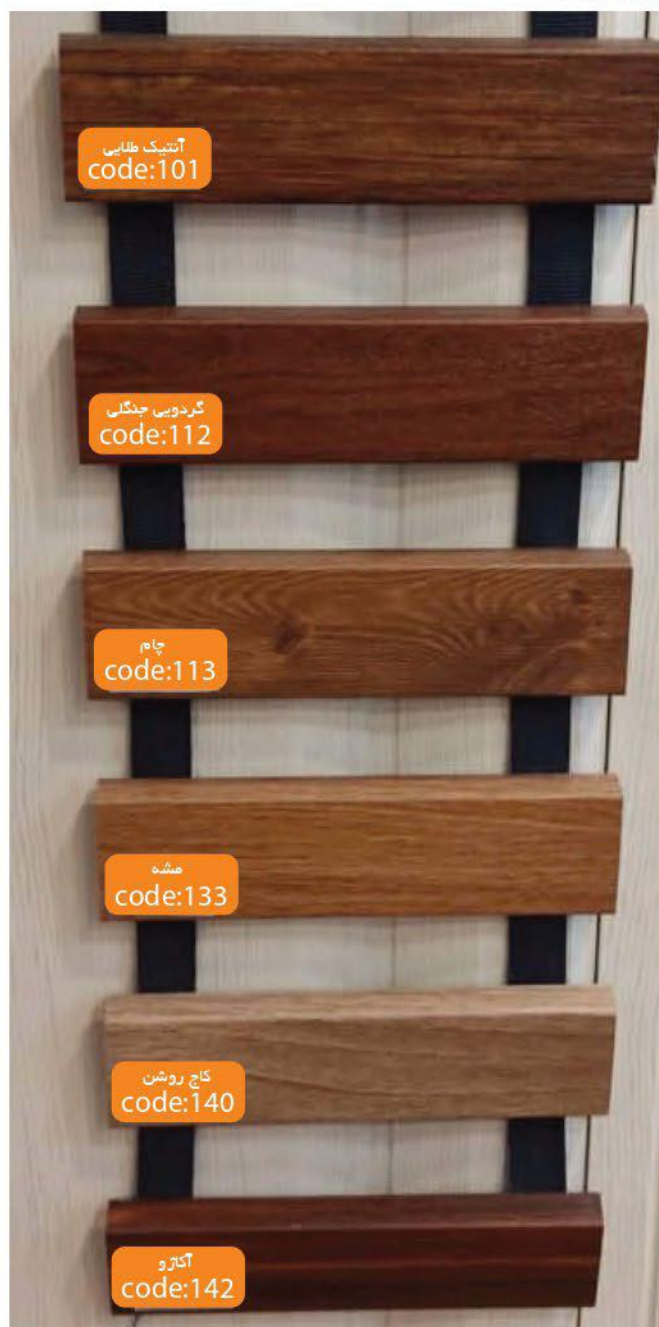




Borna

قرنيز و ديوارپوش

decomax

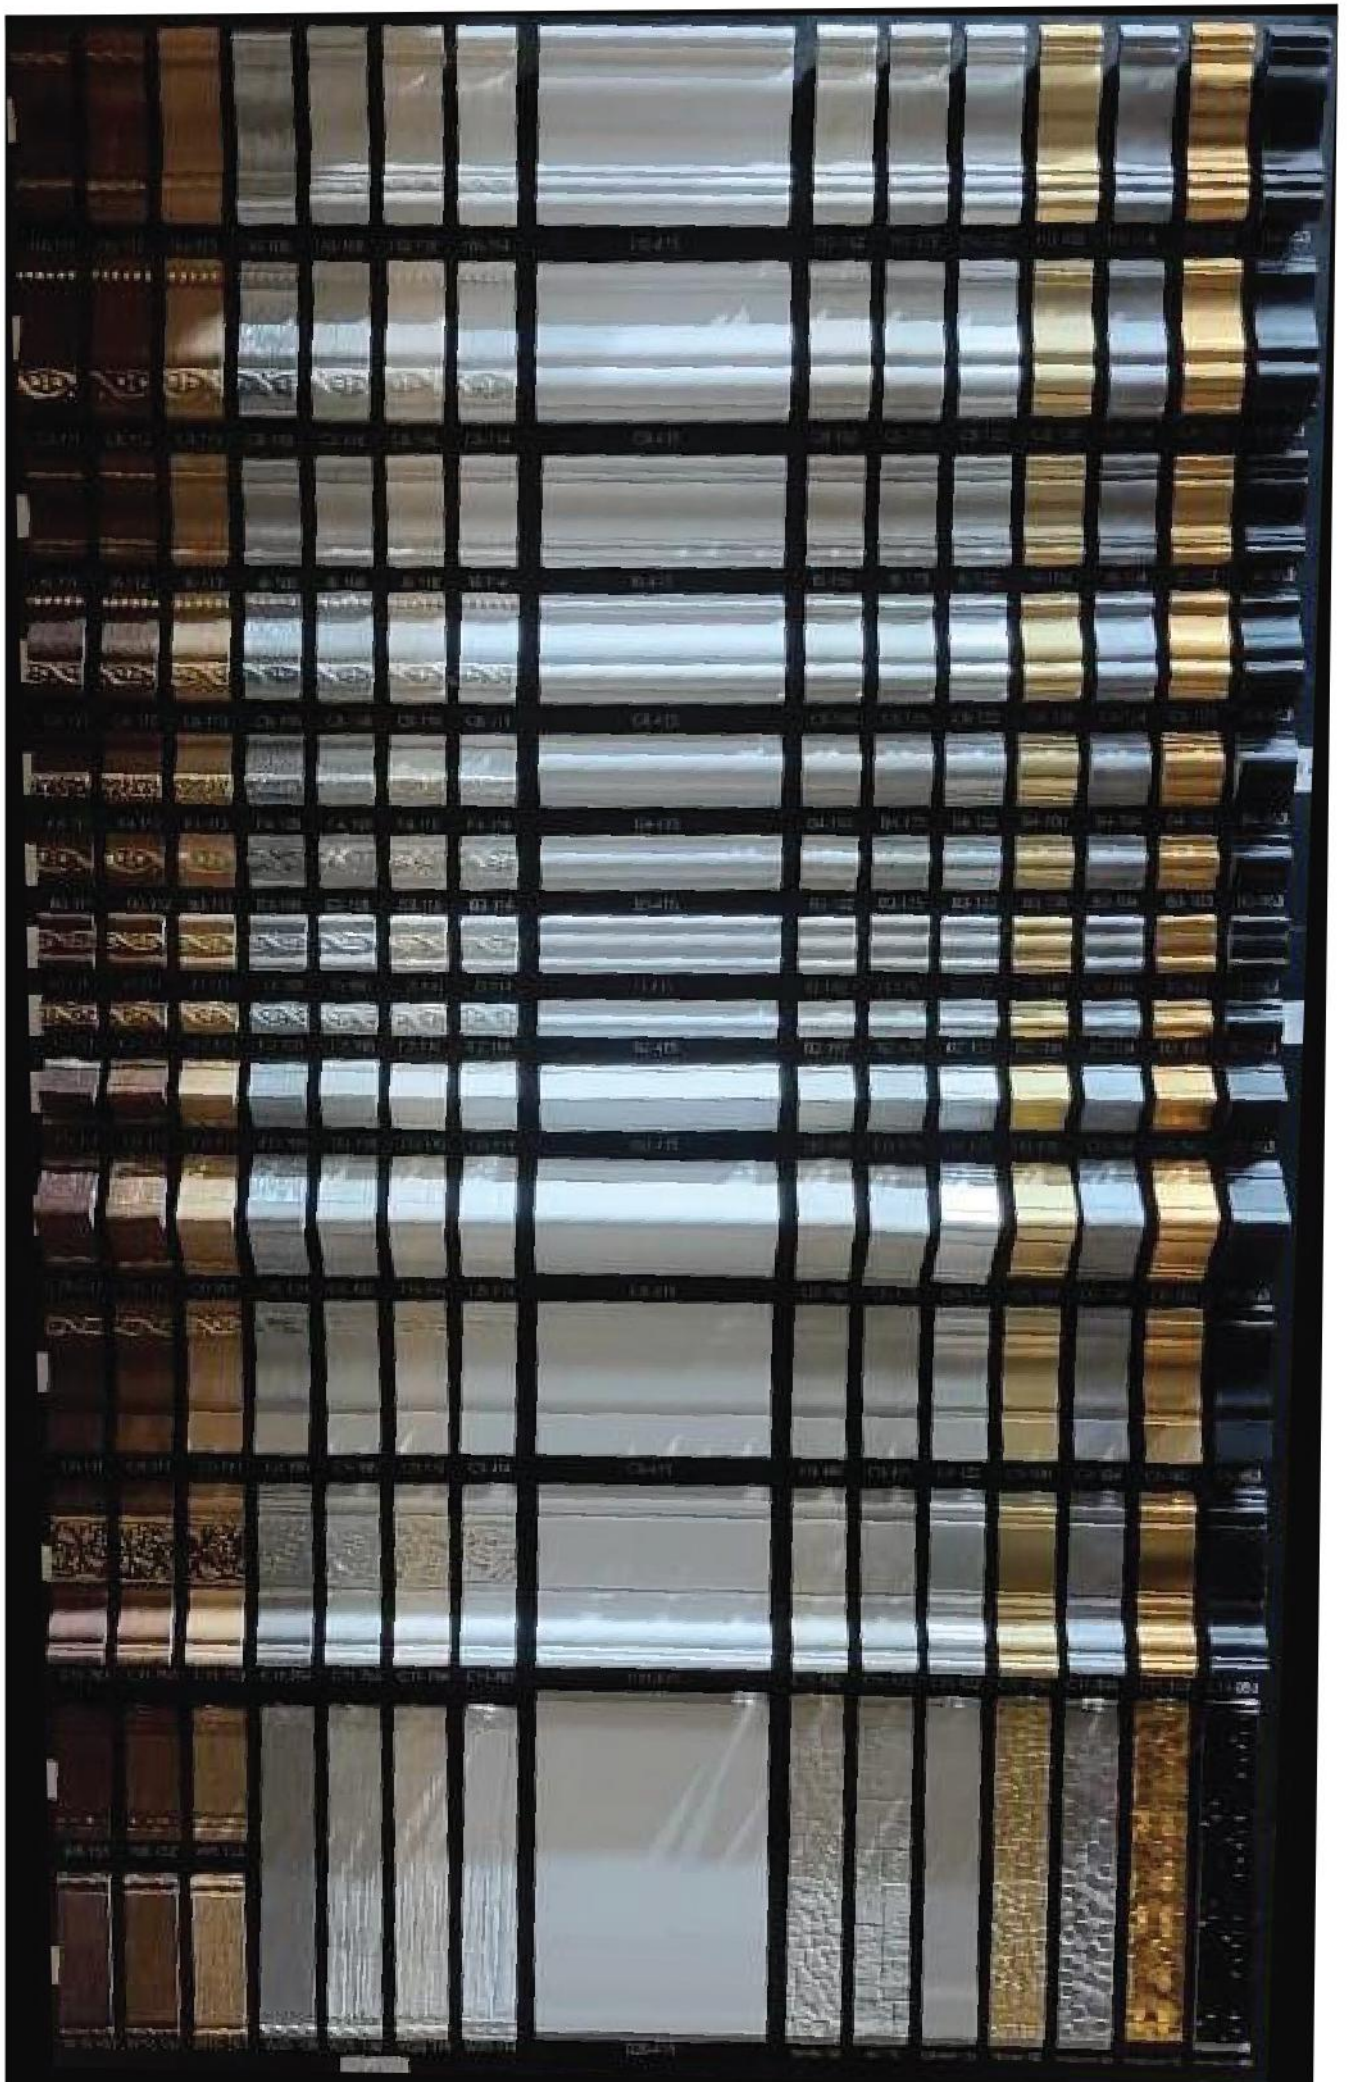



Borna

قرنيز

technopol



TECHNOPOL
Code: 350

TECHNOPOL
Code: 286

TECHNOPOL
Code: 105

TECHNOPOL
Code: 387

TECHNOPOL
Code: 285

TECHNOPOL
Code: 115

TECHNOPOL
Code: 258

TECHNOPOL
Code: 287

TECHNOPOL
Code: 153

TECHNOPOL
Code: 321

TECHNOPOL
Code: 150

TECHNOPOL
Code: 192

TECHNOPOL
Code: 283

TECHNOPOL
Code: 198

TECHNOPOL
Code: 321

TECHNOPOL
Code: 198

TECHNOPOL
Code: 106

TECHNOPOL
Code: 170

TECHNOPOL
Code: 287

TECHNOPOL
Code: 350



Borna

قرنیز و دیوارپوش
پارس فریم







Borna

قرنيز لوور


ا قرنیز لوور LA12

بهینا، مدلی از قرنیز لوور با کد LA12 را برای قسمت پایین لوور طراحی کرده است که برای هر دو مدل لوور L11 و L12 می توان از آن استفاده کرد.


مشخصات قرنیز LA11

- عرض ۶ سانتیمتر
- ضخامت ۱۵ میلیمتر
- طول ۲۴۰ سانتیمتر

نقشه سطح مقطع قرنیز LA11

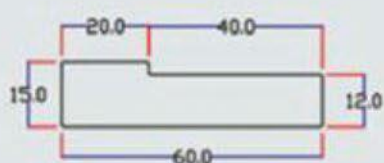

LA11

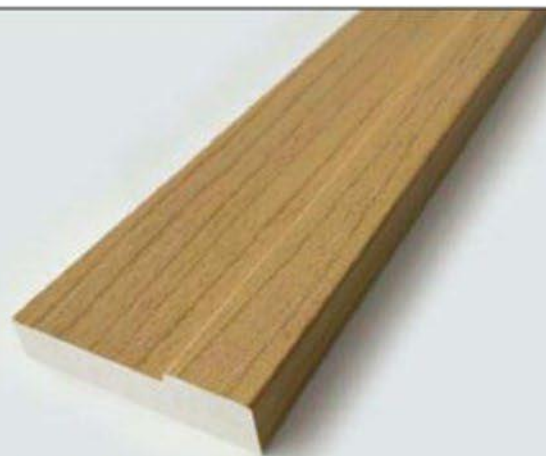

LA11-130

تصویر قرنیز LA11